



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1	55042	Upper Housing	1
2	14311	Cord Set (UL 2-Wire)	1
3	55314	Screw - Field	2
4	01059	Lock Washer	2
5	26505	Switch Assembly	1
6	S26642	Field Assembly	1
7	26042	Armature Adjustment Screw	1
8	65842	Hanger Hook	1
9	26999	Washer	1
10	26529	Anchor Screw	1
11	55002	Lower Housing	1
12	55101	Housing Screw	4
13	26899	Blade Screw	2
14	S26733	Armature	1
15	55003	Switch Actuating Arm	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be **CLEANED** and **OILED** with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.